 
 
Packing List:



 
Gk66 mechanical keyboard×1




TYPE-C

USB cable×1

Keycap puller×1



Switch pullerX1

 

Spare Keycaps

























Function description:

1.Standard mode(Double space mode)



Note: double-click Fn may make Fn keep holding

FN + Esc	`	FN + Shift + Esc	~					
Function:F1-F12 key								
Keys	Function	Keys	Function					
FN + 1	F1	FN + 7	F7					

Function

Keys

Function

Keys Function Keys Function							
N + 1	F1	FN + 7	F7				
FN + 2	F2	FN + 8	F8				
FN + 3	F3	FN + 9	F9				
FN + 4	F4	FN + 0	F10				
FN + 5	F5	FN + -	F11				
FN + 6	F6	FN + +	F12				

1. Standard mode

Keys

FN+A

FN+S

Function: Multimedia keys

▶I Play/Pause

₩ Previous

FN + D	₩ Next	FN+H	∢+ volume+
Functi	on: key sv	vitching	
Keys	Function	Keys	Function
FN + U	PrtSc	FN+J	Ins
FN+I	Scrlk	FN+K	Home
FN+O	Pause	FN+L	PgUp
FN + <	End	FN + M	Del
FN +>	PgDn	FN + Win	☆ Clock/Unlock Win key

Keys

FN+F

FN+G

Mute

∢− volume−

Function : Backlight Keys Keys

FN+←	
FN +]}	[:] Backlight mode1–5
FN + [{	[#] Backlight mode 6–9
FN+:	₩ Up LED ON/OFF
FN + "	Down LED ON/OFF
FN+↓	🛱 Backlight brightness –
FN + ↑	⊕ Backlight brightness +
FN+←	☼ Backlight Effect Speed –
FN+→	☼ Backlight Effect Speed+
FN + \	□ light effect pause / play
FN +■	Logo LED and other side LED ON/OFF

Function:Bluetooth keys

Keys	Function
FN + Z	Long press: \$1 keycap's LED flashes red and green, \$1 bluetooth equipment is pairing.
FIN + Z	Short press: To connect/disconnect \$1 bluetooth equipment.
	Long press: \$2 keycap's LED flashes red and green, \$2 bluetooth equipment is pairing.
FN + X	Short press: To connect/disconnect \$2 bluetooth equipment.
	Long press: \$3 keycap's LED flashes red and green, \$3 bluetooth equipment is pairing.
FN + C	\$3 Short press: To connect/disconnect \$3 bluetooth equipment.
FN + Tab	(1) Long press for 3 seconds to open/lock the keyboard
ШЪ	Low voltage / charging status indicator.

Note: This mode is factory standard mode, All keys and Fn functions in this mode can NOT be user-defined by 🗹 software.

2.DIY user mode

Press Fn+W to enter user mode layer1 ①, "W" lights white, Press FN+W again, back to standard mode



Note: This mode layer is user's DIY layer. All keys and FNX may be user-defined. Backlights and someFN functions may also be user-defined. (but "Fn+" functions of BT/backlight/layer switching are still like those in standard mode layer, they could NOT be user-defined).

Double-c	FN function s lick Fn to light Fr again to escape f	'LED whit	e, Fn fun	ction i	s held.		
Keys	Function	Keys Function Keys Function					
FN + 1	Shift + 1	FN + 2	Shift + 2	2	FN + 3	Shift+3	
FN + 4	Shift + 4	FN + 5	Shift + 5	5	FN + 6	Shift + 6	
FN + 7	Num7	FN + 8	Num8		FN + 9	Num9	
FN +U	Num4	FN+I	Num5		FN+O	Num6	
FN+J	Num1	FN+K	Num2		FN+L	Num3	
FN+M	Num0	FN + <	Num00		FN+>	Num •	
FN +/	Num/	FN+P	Num*		FN+-	Num-	
FN + +	Num+	FN + Esc		LED/	BT and oth	er FN funct	
Layer1 F	NX function sh	eet:					
FNX+1	F1	FNX + 2	F2		FNX+3	F3	
FNX+4	F4	FNX+5	F5		FNX+6	F6	
FNX+7	F7	FNX+8	F8		FNX+9	F9	
FNX+0	F10	FNX+-	F11		FNX++	F12	
FNX+U	PrtSc	FNX+I	Scrlk		FNX+O	Pause	
FNX+J	Ins	FNX+K	Home		FNX+L	PgUp	
FNX + M	Del	FNX+<	End		FNX+>	PgDn	
FNX+R	Ctrl+R	FNX+S	Ctrl+S		FNX+T	Ctrl+T	

FNX+V Ctrl+V

FNX + Esc

FNX+C Ctrl+C

3.DIY Mac OS mode

Press Fn+E to enter			lights white.F	Press FN+E ag	ain, back to st	andard mod	e.		
Esc 1! 2@	F2 3#	4 ^{\$} 5%	F5 6^	7 & F7	* 9(F10	- F11	=+ F12	←
Tab Q	W ©	R (3)	T.	U PS	SL	Р	I B	(B3)	₩
Capslock • HI	S	D F _«	G ◆	H J	K HM	L PU	*	₩,	Enter •
Shift Z	X *2	C *3	. B	N .	Del Pro	PD PD		Shift	↑ Del
Control	Command	•	<u></u>		-		Ctrl	ф	фф

Note: Click is the space key.
Press with other key as a FNX layer call function key,
and the FNX key can be set and moved to other keys.

Note: This mode layer is user's DIY layer, All keys and FNX may be user-defined. Backlights and someFN functions may also be user-defined. (but "Fn+" functions of BT/backlight/layer switching are still like those in standard mode layer, they could NOT be user-defined).

Keys	gain to escape Function	Kevs	Functio	n Keys	Functi
FN+1	Shift + 1	FN + 2	Shift + 2	,	Shift +
FN + 4	Shift + 4	FN + 5	Shift + 5	FN+6	Shift +
FN + 7	Num7	FN + 8	Num8	FN + 9	Num9
FN+U	Num4	FN+I	Num5	FN + O	Num6
FN+J	Num1	FN+K	Num2	FN+L	Num3
FN+M	Num0	FN + <	Num00	FN+>	Num •
FN +/	Num/	FN+P	Num*	FN+-	Num -
FN + +	Num+	FN + Esc		LED/BT and oth	er FN fur
MAC OS	layer2 FNX fu	nction she	et:		
FNX+1	F1	FNX+2	F2	FNX+3	F3
FNX+4	F4	FNX+5	F5	FNX+6	F6
FNX + 7	F7	FNX+8	F8	FNX + 9	F9
FNX+0	F10	FNX+-	F11	FNX++	F12
FNX + U	PrtSc	FNX+I	Scrlk	FNX+O	Pause
FNX+J	Ins	FNX + K	Home	FNX+L	PgUp
FNX + M	Del	FNX+<	End	FNX+>	PgDn
FNX+R	Ctrl+R	FNX+S	Ctrl+S	FNX+T	Ctrl+T
FNX+C	Ctrl+C	FNX + V	Ctrl+V	FNX + Esc	~

4.FNX layer3 function definition



All keys (except Fn key) and backlight can be user-defined in this mode.Press FNX to shift to this mode layer, release FNX

to escape from this mode layer.

The onboard mode layer1,2and3 ①②③ can be downloaded from 6 software, All settings are saved in the keyboard and are in effectanywhere even if NO driver running in conputer.

FN+Q is the drive mode layer, some special function (For example: You may assign a macro of more than 32 bytes to a key in the drivemode while it's unavailable in those onboard mode layer) can be set in this mode. You must keep the drive running and the keyboard connect with the drive.



From The community, For The community! CEF© ② ★ RoHS

Powered by

MBEEN
MAKEBYSELF.CN

Product model: GK66DDD Backlight: RGB

Material:metal+ABS/PC

Connect: USB Type-C Transfer: USB/Bluetooth N.W.:455g Power:5V-380mA

Keys:66

Battery: 750 mAH Li-battery

Size:295 x 105 x 45mm



SKYLONG

- Dong Guan Makebyself Technology Co.,Ltd.
 - +86-0769-82865672
- WWW. Jikedingzhi.com
- http://www.jikedingzhi.com/downloadlist?driverID=41
- 5/F,#H Building,Fa-Si-Te Industrial Park,No.89 Li-Ya-Tang Industrial